

How to re-calibrate your remote control?

If your remote control cursor keeps floating away, please re-calibrate it as follow.

1. Remove all batteries from the remote control, leave the battery compartment open, leave the USB sensor in the battery compartment.
2. On your remote control, press down and hold the left and right buttons together, in the meantime, put the batteries back in.
3. Don't release the left and right buttons, you should see the light on the remote control flashes quickly.
4. Now place the remote control on a flat surface, and release the left and right buttons.
5. When you see the light on the remote control become steady green, press the OK button once and release, the light will go off, and the remote control will go in auto-calibrate mode.
6. Don't touch the remote control, wait for around 5 seconds, the light on the remote control will flash slowly for 10 times, then go off. This means your remote control is successfully calibrated, you can put back the battery compartment, and plug in the USB sensor on your frame to use it.